

| l t ' ' . j f l i : ;  
 j f i . , - j f l i : ;  
 c r s e z e ! r s t j v z  
 z b a g o z r z c e z s e ?  
 F I 9 7 5 3 1 0 9 7 5 3 1 0  
 x t b 8 6 4 2 s - s 8 6 4 2  
 a d y u h a x b g o a p f l t  
 a k u n u s v y p u n q b o e  
 ? f l p u f i q k b h d v y g r  
 Г З J y n Э f f n Z 6 b x u k n  
 O L C ф Л О М L P B Ч M Z n G  
 E y П C B T E P T R B  
 И A K И П m Ф E y u Д T Я B  
 K N H ж ф X D N K H m & h X U  
 Ж Ш Ю Ы Щ W M - . . M W % Æ

10-308K

10-8-C

10 set  
S-5

Behind others in rack

# 318 J

# 318 J series  
# 118 J "

|    | Normal Wedge #47S | Justification Wedge |      | Width in Inches |
|----|-------------------|---------------------|------|-----------------|
|    |                   | 110D                | 111D |                 |
| 6  | 8                 | 7                   |      | .0462           |
| 7  | 8                 | 2½                  |      | .0555           |
| 8  | 7½                | 5½                  |      | .0648           |
| 8  | 8                 | 7                   |      | .0738           |
| 9  | 8                 | 2½                  |      | .0832           |
| 10 | 7½                | 5½                  |      | .0925           |
| 10 | 8                 | 7                   |      | .1015           |
| 11 | 8                 | 2½                  |      | .1108           |
| 12 | 7½                | 5½                  |      | .1202           |
| 12 | 8                 | 7                   |      | .1292           |
| 13 | 8                 | 2½                  |      | .1385           |
| 15 | 8                 | 2½                  |      | .1662           |

861-10-16-500F(12) Cellular

Abutment-screw Packing Piece 47S3 on older equipments) must be in position the sizes in this table.

Justification-wedge Gage 46S1 for setting these regular Justification Wedges 10D and 11D.

822-7-17-500-F (20)

10-308A series  
Numbers denote # 308A series  
Characters " # 84 "

1- 49, 70, 77, 81, 220, 221, 222  
2- 23, 24  
Ice 7, 37, 47, 70, 86  
3- O, X, 4, 42, 58, 68, 73, 84, 94  
4- 44, 49, 50, 53, 55, 62, 63, 64, 70, 74, 75, 98  
5- 8, 31, 51, 52, 60, 69, 100  
P  
ABCEO, I, 2, 29, 34, 67, 71  
59, 11, 2, 4, 20, 23, 24, 53, 55, 56, 64, 65, 101  
H, X, 21, 27, 30  
M, 7, 25, 26, 28, 32

|    | Normal Wedge #47S | Justification Wedge #110D | Width in Inches |
|----|-------------------|---------------------------|-----------------|
| 6  | 7½                | 7                         | .0387           |
| 6  | 8                 | 7                         | .0402           |
| 7  | 8                 | 1                         | .0540           |
| 8  | 7½                | 2½                        | .0618           |
| 8  | 8                 | 2½                        | .0693           |
| 9  | 7½                | 4                         | .0772           |
| 9  | 8                 | 4                         | .0847           |
| 10 | 7½                | 5½                        | .0925           |
| 10 | 8                 | 5½                        | .1000           |
| 11 | 7½                | 7                         | .1078           |
| 11 | 8                 | 7                         | .1153           |
| 13 | 8                 | 2½                        | .1385           |

8016-10-16-500F(10) Cellular

\* The Abutment-screw Packing Piece 47S3 on older equipments) must be in position to obtain the sizes in this table.

† Use Justification-wedge Gage 46S1 for setting these regular

Justification Wedges 10D and 11D.